





MARCH 1992  
DESIGN DATA

## FIXING CERAMIC TILES TO SUSPENDED TIMBER FLOORS

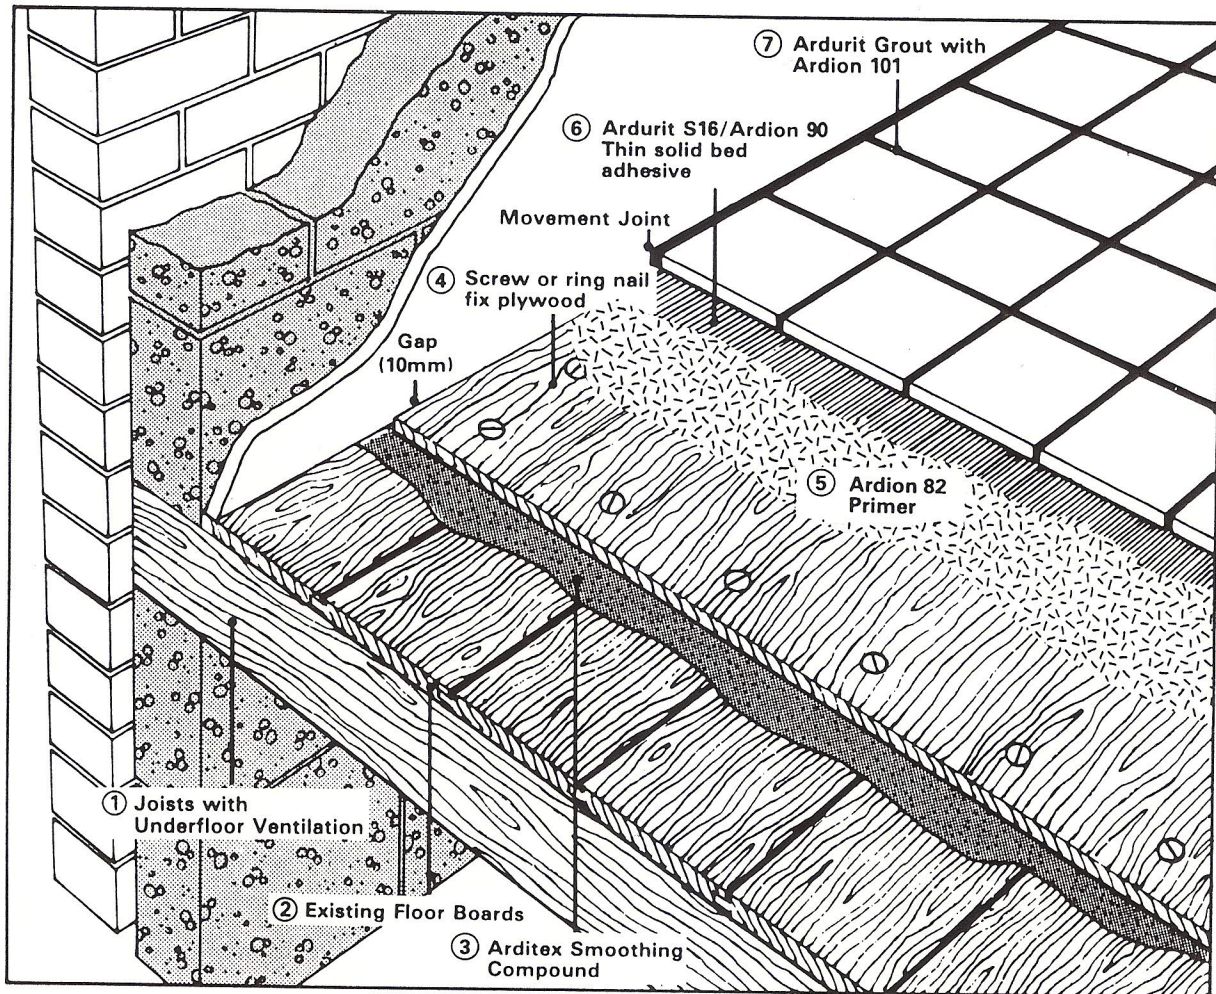

### NOTES:

1. Provide adequate underfloor ventilation.
2. Ensure floorboards are securely fixed.
3. Pre-level existing floor, if necessary, with Arditec to give a flush fit for the subsequently applied boards.
4. Refer to BS 5385:Part 3 clause 14.4 regarding sealing backs and edges of boards. **A rigid base is essential.** Fix dry WBP plywood of sufficient thickness (usually 18mm), with screws or ring nails at centres of 300mm or less. Use additional fixings at the edge of boards.
5. Once the board is securely fixed prime the surface being tiled with Ardion 82 primer and allow to dry.
6. Thin solid bed tiles on the dry primed surface using Ardurit S16 incorporating Ardion 90.
7. Use Ardion 101 with Ardurit grout for water repellent, flexible joints.

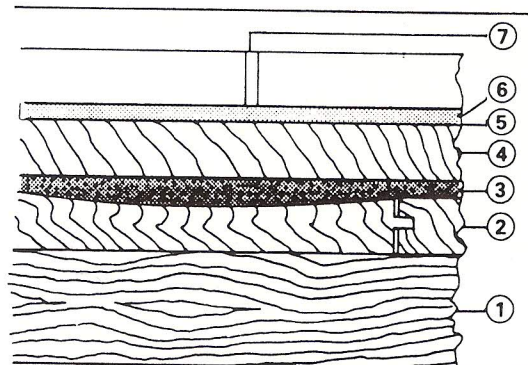

NOTE: The information supplied in our literature or given by our employees is based upon extensive experience and, together with that supplied by our agents or distributors, is given in good faith in order to help you. Our Company policy is one of continuous Research and Development; we therefore reserve the right to update this information at any time without prior notice. We also guarantee the consistent high quality of our products; however, as we have no control over site conditions or the execution of the work, we accept no liability for any loss or damage which may arise as a result thereof.

ARDEX UK LIMITED, HOMEFIELD ROAD, HAVERHILL, SUFFOLK CB9 8QP. Telephone: 0440 63939 Fax: 0440 703424



BS 5750 : Part 2: 1987  
ISO 9002/EN 29002  
Reg No: FM 1207  
QAS 2567/350